



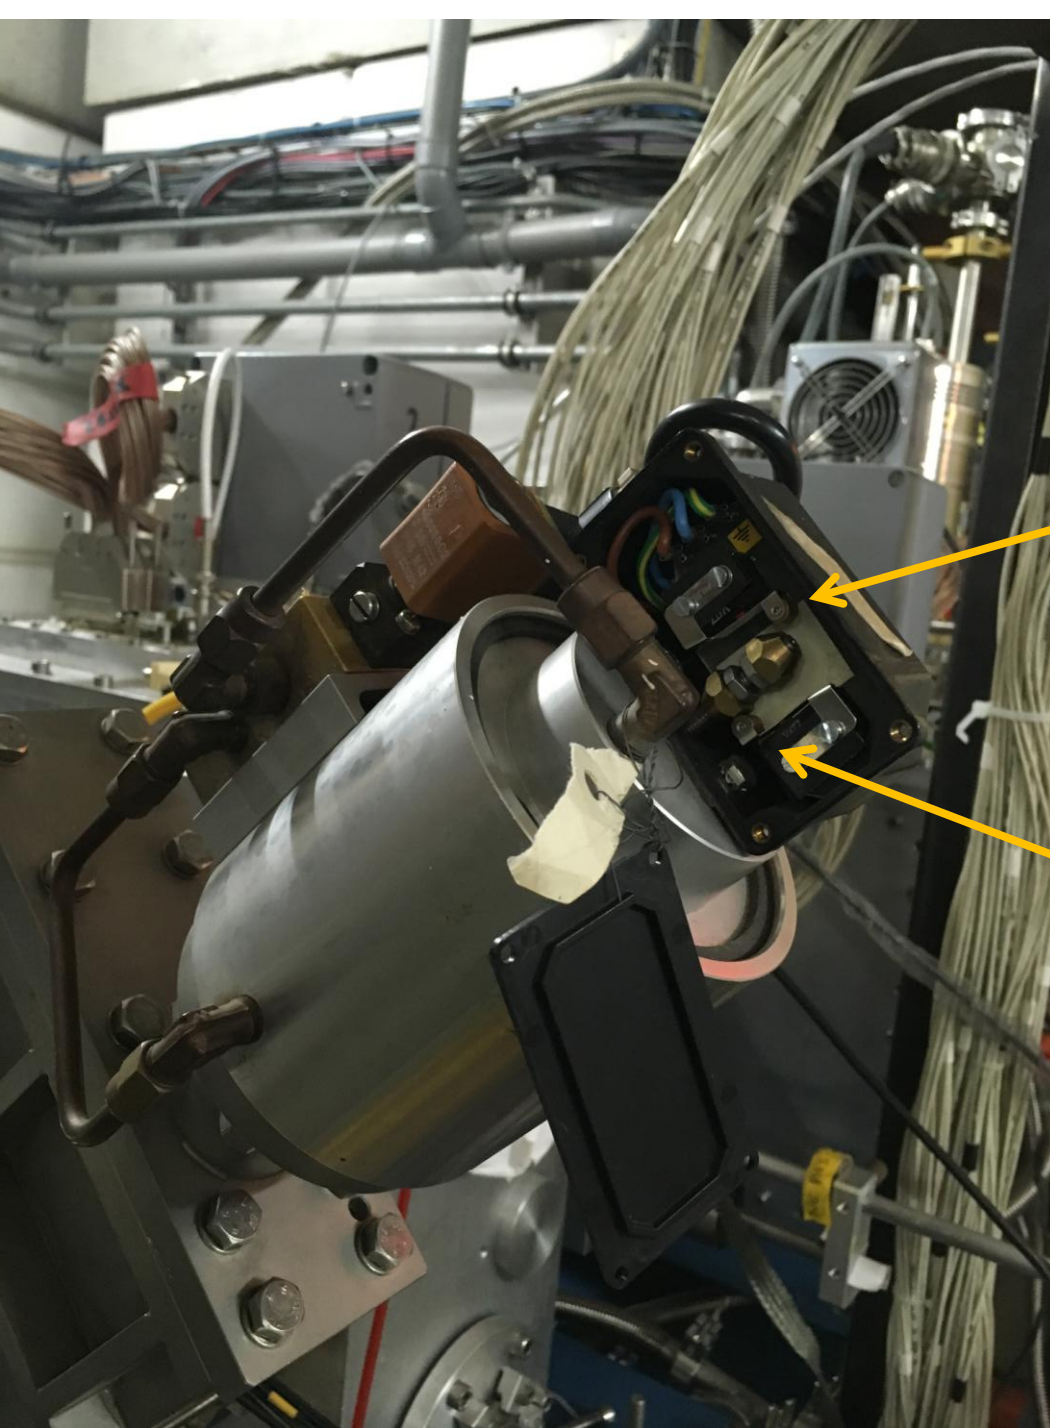


Switch position vanne
ouverte/valve open

Switch position vanne
fermée/valve close

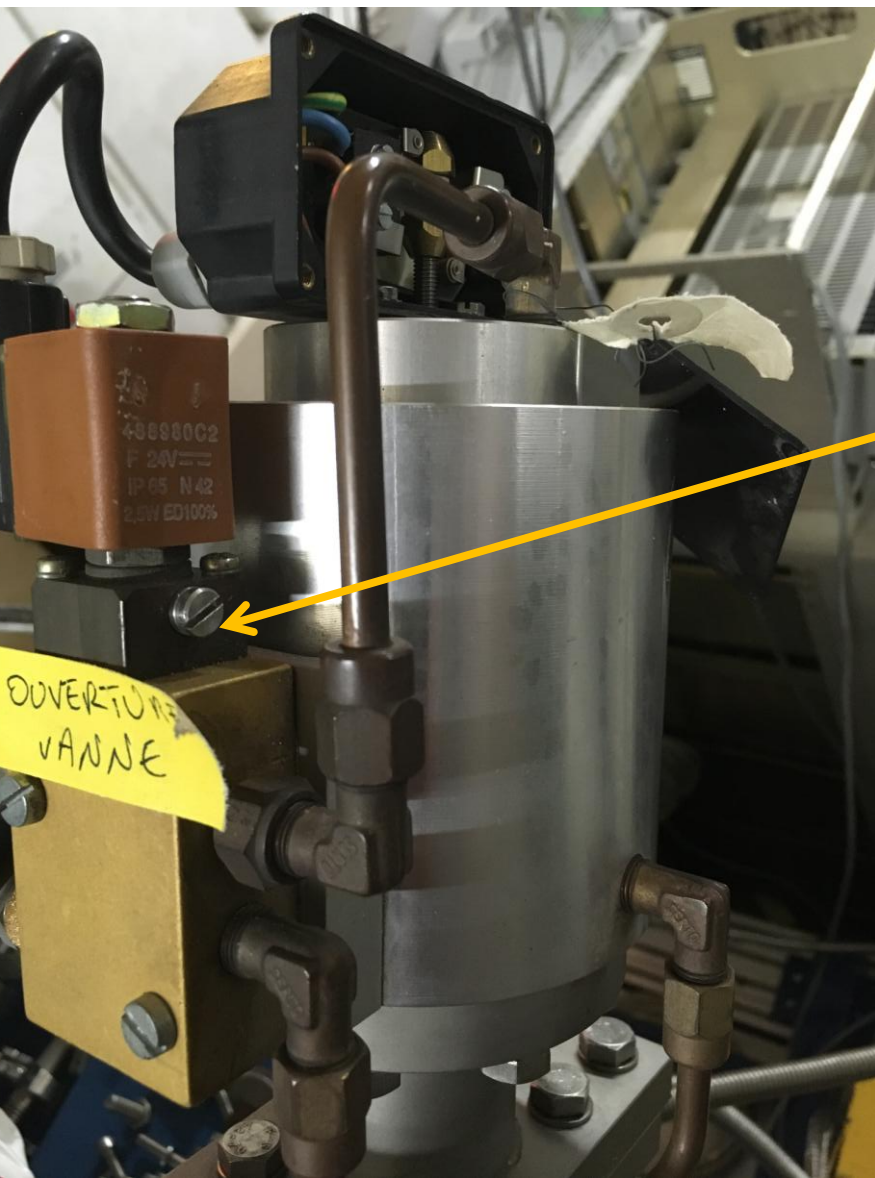

Vis ouverture/fermeture de vanne

Screw to open/close the valve

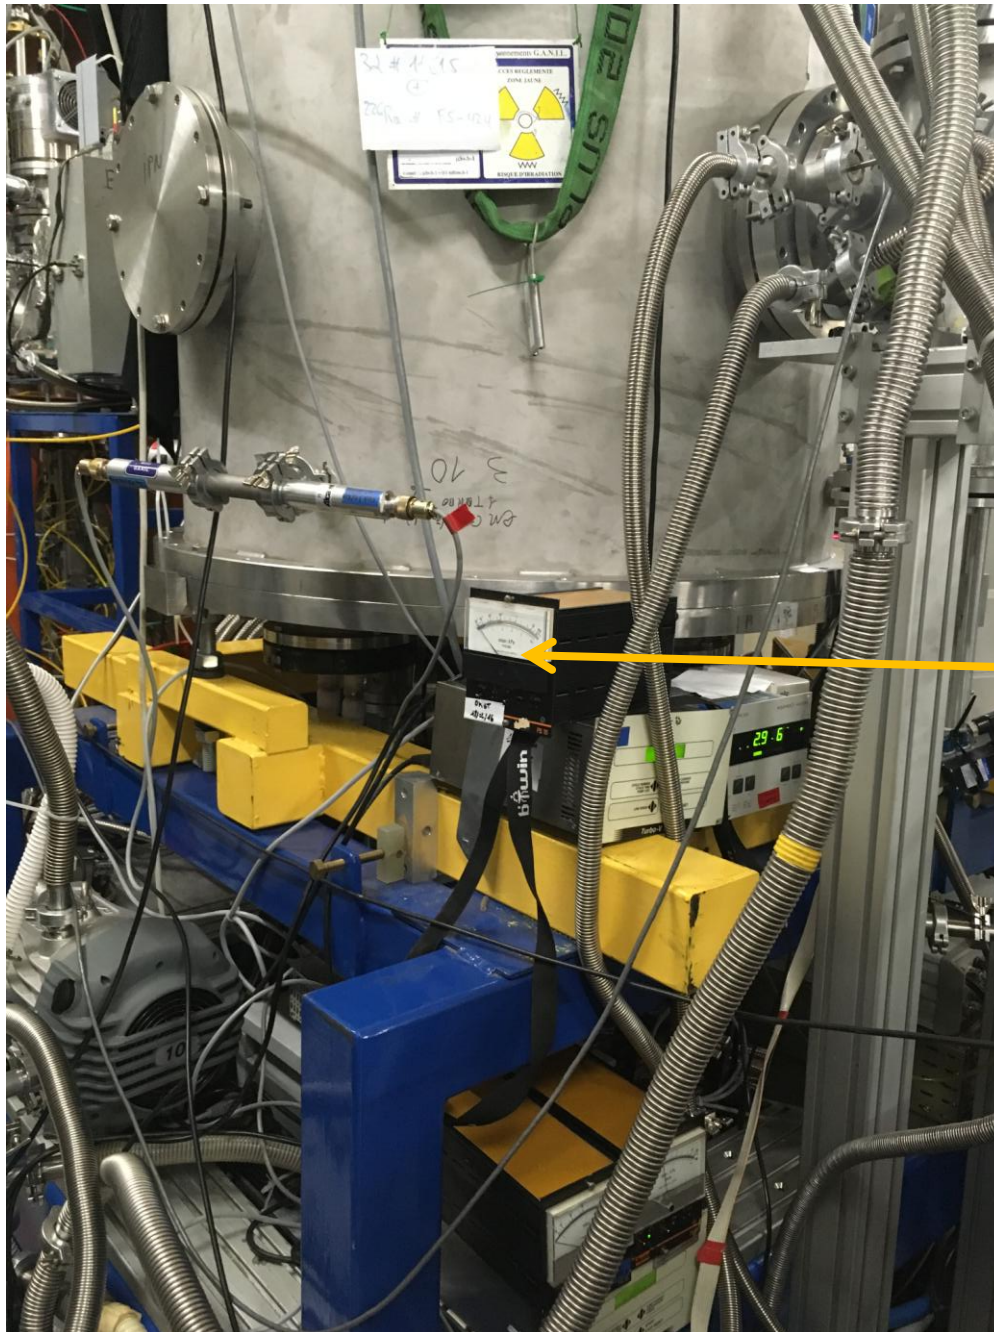

Valeur de vide derrière la
feuille valeur min pour ouvrir
la vanne 7.10-1

Gauge from the sensor which
is behind the window. To
open the valve check the
value the min is 7.10-1.